

USE, CARE AND SAFETY ADVICE

BEFORE USE:

Remove any labels, wash in hot soapy water, rinse and dry.

COOKING:

Always match the size of the pan base to the size of the heating area. Use a moderate heat and do not allow the pan to boil dry. Do not pour cold water into a hot pan, as this may cause warping. Excessive heat will spoil the appearance of the pan. Do not heat an empty pan. Never allow a gas flame to extend up the sides of a pan, as it can cause overheating and damage handles. Do not store food in the pans. The range is not suitable for microwave oven use. Always use oven gloves or similar when moving hot pans around the hob or oven.

Ensure that handles are not positioned over other heating elements, and that they do not overhang the edge of the hob. Never leave a pan unattended on a hob.

Verify that knobs and handles remain secure - do not attempt to repair broken cookware, return the pan to Judge at the address given.

CLEANING:

Soak the pans for a few minutes before washing. Remove food deposits with a nylon pan scourer or brush - we do not recommend the use of steel scourers or harsh and abrasive scouring powders. Wash pan in hot soapy water, rinse and dry thoroughly. The pans are dishwasher safe.

NON STICK SURFACES

Before use, season the cooking surface with a little oil. Use Medium to Low heat for best cooking results. Extremely high temperatures can cause discoloration. If higher temperatures are necessary, pre-heat the pan on a Medium heat for a few minutes: never allow the pan to boil dry. We strongly recommend the use of plastic or wooden utensils only - especially made for pans with non-stick surfaces. Do not use a knife to cut food in the pans.

Handles and Knobs

Handles and knobs are oven safe to 180°C (Gas Mark 4, 350°F).

GLASS LIDS

You should be aware that although these have been designed to be as safe as possible, glass can break under certain circumstances. Avoid placing glass lids directly on a hot-plate, as this greatly reduces breakage resistance.

HOB SUITABILITY

This cookware is suitable for gas, electric, ceramic and halogen hobs, but is not suitable for induction hobs.

GUARANTEE

Please read the Use, Care and Safety Advice thoroughly. Judge cookware has a 25 year Guarantee to be free from defects in material and workmanship under normal household use. XYLAN® 2 Layer Non-Stick coatings are guaranteed for 10 years, providing the Use, Care and Safety Advice is followed.

We promise to the original purchaser that any defective part or item will be replaced, (or we will supply a product of equal value if the product is out of production). Please retain your purchase receipt.

The Guarantee does not cover damage by accident, misuse or commercial use. In addition, discoloration, scratching, staining and damage from overheating is not covered by the Guarantee. This Guarantee is in addition to your statutory rights.

JUDGE

Avonmouth Way
Bristol
BS11 9HX
Great Britain

sales@horwood.co.uk
www.judgecookware.co.uk